


Nixie Clock user's manual

Connect the power supply to the clock and the mains socket. Use a pen or other sharp object to set the time according to the figure below.

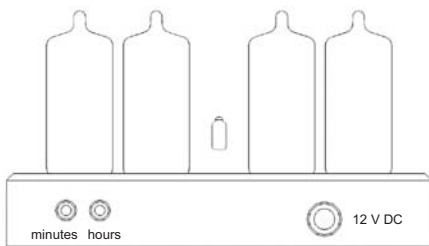

The seconds counter will reset when any push button is released. Keep any push button pressed until it is time for the clock to start counting from zero.

To select between flashing or steady comma separator (the small bulb in the middle), do as follows:

1. Disconnect the power connector.
2. Steady light: keep 'hours' pressed while simultaneously connecting the power supply.
3. Flashing light: keep 'minutes' pressed while simultaneously connecting the power supply.

When the power is connected, release the push button of choice, and set the time as usual. The flashing / steady setting is stored in a non-volatile memory.

CAUTION

Do not open the clock, risk of electrical shock.
For service, contact your retailer.

Only use the enclosed power supply.

For indoor use only

More information available at www.logicapplied.se

Technical data

Power supply: **stabilized 12 V DC (positiv center pin)**

Power consumption: **3 W**